





 

 

 



 



 





 










 








Originalfernbedienung Ersatzfernbedienung

|   |       |   |                  |
|---|-------|---|------------------|
|    | AV    |    | AV / Input / RDS |
|    | Power |    | Power            |
|    | Mute  |    | Mute / Dimmer    |
|    | 1     |    | 1                |
|    | 2     |    | 2                |
|    | 3     |    | 3                |
|    | 4     |    | 4                |
|    | 5     |    | 5                |
|    | 6     |    | 6                |
|   | 7     |   | 7                |
|  | 8     |  | 8                |
|  | 9     |  | 9                |
|  | P+    |  | CH+ / Page+      |
|  | 0     |  | 0                |
|  | V+    |  | Vol+             |
|  | P-    |  | CH- / Page-      |
|  | V-    |  | Vol-             |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                               |
|---|------------|---|-------------------------------|
|    | Up/CH+     |    | Up                            |
|    | Left/Vol-  |    | Shift + Left                  |
|    | ←          |    | Left                          |
|    | OK         |    | OK                            |
|    | Right/Vol+ |    | Right                         |
|    | Down/CH-   |    | Down                          |
|    | Menu       |    | Menu / Home                   |
|    | Exit       |    | Exit / Cancel / Clear         |
|    | Info       |    | Info / Angle                  |
|   | EPG        |   | Guide / EPG / -/--            |
|  | FAV        |  | Fav / Marker / PC             |
|  | TXT        |  | Text / Goto                   |
|  | S-T        |  | D.Menu / Top                  |
|  | Tv/R       |  | TV/Radio /                    |
|  | Timer      |  | Sleep / Timer                 |
|  | Edit       |  | Setup / OPT /                 |
|  | Del        |  | Shift + Exit / Cancel / Clear |



