



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Text / Play/Pause		Play / Slow
	Text / Play/Pause		Pause / Step / Freeze
	Text / Play/Pause		Text / Goto
	Still / Stop		Stop / Hold
	Radio		TV/Radio /
	Aspect / Size		Zoom / Size
	Red / <<<		<<< / Tune-
	Red / <<<		Red / Netflix / Search
	Green / >>>		Green / APP / Repeat
	Green / >>>		>>> / Tune+
	Yellow / I<<<		Yellow / YouTube / Repeat
	Yellow / I<<<		I<<< / Preset-
	Blue / >>>I		>>>I / Preset+
	Blue / >>>I		Blue / Prime Video / Random
	Source		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	Index		Display / Media
	CH +		CH+ / Page+
	Vol -		Vol-
	List		Smart / List
	CH -		CH- / Page-
	1		1
	2		2
	3		3





Originalfernbedienung

Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio / I/II		Audio / Lang I/II
	0		0
	DVB		D.Menu / Top
	FAV		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -->
	Prev. CH.		Back / Return
	Cancel	+	Shift + Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	USB	+	Shift + 8
	Rec		Rec / Rec Mode

Originalfernbedienung

Ersatzfernbedienung

