






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Anyview Cast		Shift + Up
	Anyview Cast Off		Shift + Down
	TV		TV/Radio /
	Source		AV / Input / RDS
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	DMP		Display / Media
	Pause		Pause / Step / Freeze
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	HiSmart		Smart / List
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	CH.List		Shift + Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	CH-		CH- / Page-



