



 

 


 
 

 


 

 
 
 
 


 
 
 
 
 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	*		Menu
	Search		TV/R
	[<>]		Format
	Tv Guide		Guide
	List		List
	Sources		AV
	Smart Tv		Media
	Home		Smart
	Tv/Exit		Exit
	Red		Red

Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info
	Options		Options
	Back		Back
	Multiview		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
1 . @	1	1	1				
2 ABC	2	2	2				
DEF 3	3	3	3				
4 GHI	4	4	4				
5 JKL	5	5	5				
MNO 6	6	6	6				
7 PQRS	7	7	7				
8 TUV	8	8	8				
WXYZ 9	9	9	9				
0 _	0	0	0				
SUBTITLE	Subtitle	AD SUBT	Subt				
TEXT	Text	REPEAT TEXT	Text				

