



 




 

 

 
 

 

 









 


 
 




 














Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		1		1
	Mute		Mute		2		2
	Tv/AV		AV		3		3
	Multimedia		Media		4		4
	I/II		Dual		5		5
	List		List		6		6
	ARC		Options		7		7
	Menu		Menu		8		8
	PR+		Ch +		9		9
	PR-		Ch -		0		0
	Up		Up		PSM		Guide
	Down		Down		SSM		Pre Ch
	Right		Right		Split Zoom		Eject
	Left		Left		PIP/DW		3D
	OK		Ok		Sleep		Sleep
	Vol+		Vol +		[≡?]/Reveal		TV/R
	Vol-		Vol -		Text/*		Text





**Originalfernbedienung Ersatzfernbedienung**

	[≡♦]/Win. Size		Format
	[≡/ ]/Mix		D. Menu
	[≡x]/Position		Subt
	[≡o]/Time		Exit
	[≡+]/Hold		Back
	[≡i]/Index		Info
	Green/PIP PR+		Green
	Red/PIP PR-		Red
	Yellow/Swap		Yellow
	Blue/PIP Input		Blue

**Originalfernbedienung Ersatzfernbedienung**