



 
 
 















 












Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Options		Setup / OPT /
	0		0
	Screens		Display / Media
	Vol +		Vol+
	Favourites		Fav / Marker / PC



 



Originalfernbedienung Ersatzfernbedienung

	P +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer
	P -		CH- / Page-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX		Text / Goto
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	V-Format		Picture / Format
	EPG		Guide / EPG / -/-
	i		Info / Angle
	Timer	 + 	Shift + Sleep / Timer
	I / II		Audio / Lang I/II
	SUB-T		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung