


 
 


 




 
 
 

 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	3D		3D
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Prog +		Ch +
	Prog -		Ch -
	Vol +		Vol +
	Vol -		Vol -

Originalfernbedienung Ersatzfernbedienung

	Up / CH +		Up
	Down / CH -		Down
	Right / Vol +		Right
	Left / Vol -		Left
	OK		Ok
	Menu		Menu
	Info		Info
	EPG		Guide
	Exit		Exit
	List		List
	TXT		Text
	S - T		Dual
	TV / R		TV/R
	Timer		AV
	Audio		Shift + Dual
	Play/Pause		Play
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Play/Pause		Pause
	Rec		Rec
	Back		Back
	Red / <<		Red
	Red / <<		<<
	Green / >>		Green
	Green / >>		>>
	Yellow / I<<		Yellow
	Yellow / I<<		I<<
	Blue / >>I		Blue
	Blue / >>I		>>I

Originalfernbedienung Ersatzfernbedienung

