







 






























 

 
 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	TV Sys.		D.Menu / Top
	Browser		Display / Media
	Copy		Picture / Format
	Music		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Repeat		Shift + Green / APP / REPEAT

Originalfernbedienung Ersatzfernbedienung

	0		0
	Info		Info / Angle
	<<		<< / Tune-
	Vol -		Vol-
	Vol +		Vol+
	I<<		I<< / Preset-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Home		Shift + Menu / Home
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Down		Down
	Setup		Setup / OPT /
	Time Shift		Sleep / Timer
	Slow I>		Shift + Play /
	A-B		Shift + YouTube / YouTube /
	Goto		Shift + Text /
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Shift + Info / Angle
	Red		Red / Netflix / Search
	Green / EPG		Green / APP / Repeat
	Green / EPG		Guide / EPG / -/--
	Yellow / Text		Text / Goto
	Yellow / Text		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

