



Originalfernbedienung Ersatzfernbedienung

|   |        |   |                             |
|---|--------|---|-----------------------------|
|    | Power  |    | Power                       |
|    | 1      |    | 1                           |
|    | 2      |    | 2                           |
|    | 3      |    | 3                           |
|    | 4      |    | 4                           |
|    | 5      |    | 5                           |
|    | 6      |    | 6                           |
|    | 7      |    | 7                           |
|    | 8      |    | 8                           |
|    | 9      |    | 9                           |
|   | Mute   |   | Mute / Dimmer               |
|  | 0      |  | 0                           |
|  | 16:9   |  | Picture / Format            |
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                       |
|---|------------|---|-----------------------|
|    | TV         |    | Shift + 1             |
|    | Up / P+    |    | Shift + Up            |
|    | Up / P+    |    | Up                    |
|    | AV         |    | AV / Input / RDS      |
|    | Left / V-  |    | Left                  |
|    | Left / V-  |    | Shift + Left          |
|    | Menu       |    | Menu / Home           |
|    | Menu       |    | Shift + Menu /        |
|    | Right / V+ |    | Right                 |
|    | Right / V+ |    | Shift + Right         |
|   | S / M / D  |   | Exit / Cancel / Clear |
|  | Down / P-  |  | Shift + Down          |
|  | Down / P-  |  | Down                  |
|  | Recall     |  | Back / Return         |
|  | Recall     |  | Shift + Back / Return |
|  | i          |  | Info / Angle          |
|  | EQ         |  | Subtitle / EQ         |





Originalfernbedienung    Ersatzfernbedienung

|  |      |                         |
|--|------|-------------------------|
|  | ≡i   | +  Shift + Info / Angle |
|  | PP   | Sound / Title           |
|  | ≡    | Text / Goto             |
|  | /≡   | Setup / OPT /           |
|  | Hold | Stop / Hold             |
|  | Size | Zoom / Size             |
|  | ≡X   | Sleep / Timer           |
|  | ≡?   | D.Menu / Top            |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |
|  |      |                         |

Originalfernbedienung    Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

