



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	<	 + 	Shift + Left
	>	 + 	Shift + Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Guide		Guide
	i		Info
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Filelist		Smart
	Playlist		Media
	P +		Ch +
	P -		Ch -
	<<		<<





Originalfernbedienung Ersatzfernbedienung

	Play / Pause		Play
	Play / Pause		Pause
	>>		>>
	Rec		Rec
	Stop		Stop
	l> Slow		>>l
	Timeshift		Sleep
	Mark		Pre Ch
	Search	+	Shift + TV/R
	Timer		AV
	PIP		Options
	V-Key		List
	Text		Text
	Audio		Dual
	Subtitle		Subt
	TV		TV/R
	Radio		Format

Originalfernbedienung Ersatzfernbedienung

	Help		D. Menu

