


**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	DVD		Shift + 1
	Tuner		Shift + 2
	Aux		Shift + 3
	USB		Shift + 4
	Open / Close		Eject
	TV / Video		TV/R
	1 / RDS Display		1
	2		2
	3 / TA		3
	4 / PTY -		4
	5 / PTY Search		5
	6 / PTY +		6
	7		7
	8		8
	9		9
	0 / Video Sel		0

**Originalfernbedienung    Ersatzfernbedienung**

	Remain		Guide
	Cancel		Exit
	<<		<<
	Repeat		Text
	Step		Shift + Pause
	>>		>>
	I<<		I<<
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	>>I		>>I
	Volume +		Vol +
	Volume -		Vol -
	Mute		Mute
	Tuning + / CH +		Ch +
	Tuning - / CH -		Ch -
	Menu		Menu





**Originalfernbedienung    Ersatzfernbedienung**

	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Info		Info
	Audio		Dual
	Subtitle		Subt
	Dolby PL II Mode		Red
	Mo/St / Slow	 + 	Shift + Play
	Dolby PL II Effect		Green
	DSP/EQ		3D
	Test Mode		Smart
	Zoom	 + 	Shift + Eject
	P.Scan / Tuner Memory		Pre Ch
	Logo		Yellow

**Originalfernbedienung    Ersatzfernbedienung**

	Sound Edit		Media
	NT/PAL / Ez View		Options
	Slide Mode		AV
	Sleep		Sleep
	Digest		D. Menu
	Dimmer		Blue





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -

**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok

