
 
 






 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	TV / STB		AV / Input / RDS
	TV / R		TV/Radio /
	Sleep		Sleep / Timer
	SUB		Subtitle / EQ
	TXT		Text / Goto
	Multi		Display / Media
	P / N		Picture / Format
	Recall		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	SAT		Shift + 0
	EPG		Guide / EPG / -/-
	Fav		Fav / Marker / PC
	PGUP		CH+ / Page+
	PGDN		CH- / Page-
	Up		Up
	Right		Right
	FAV +		Vol+
	FAV -		Vol-
	Down		Down
	Left		Left
	OK		OK
	Menu		Menu / Home

 




**Originalfernbedienung    Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Zoom		Zoom / Size
	Edit		D.Menu / Top
	Info		Info / Angle
	USB		Shift + 8
	A - B		Shift + Yellow / YouTube /
	Goto		Shift + Text /
	OGG		Shift + 1
	JPEG		Shift + 2
	PIP		Eject / Surround
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

**Originalfernbedienung    Ersatzfernbedienung**

	T.S.		Sound / Title
	<<		<< / Tune-
	>>		>> / Tune+
	PVR List		Smart / List
	Play / Pause		Play / Slow
	I<<		I<< / Preset-
	>I<		Setup / OPT /
	>>I		>>I / Preset+

