



Originalfernbedienung Ersatzfernbedienung

|   |                  |   |        |
|---|------------------|---|--------|
|    | Power            |    | Power  |
|    | Sleep / Auto Off |    | Sleep  |
|    | Clock / Timer    |    | AV     |
|    | Play / Rec       |    | Rec    |
|    | Disc             |    | Pre Ch |
|    | 1 / Disc 1       |    | 1      |
|    | 2 / Disc 2       |    | 2      |
|    | 3 / Disc 3       |    | 3      |
|    | 4 / Disc 4       |    | 4      |
|    | 5 / Disc 5       |    | 5      |
|   | 6                |   | 6      |
|  | 7                |  | 7      |
|  | 8                |  | 8      |
|  | 9                |  | 9      |
|  | 0                |  | 0      |
|  | >≡ 10            |  | Guide  |
|  | Del              |  | Exit   |

Originalfernbedienung Ersatzfernbedienung

|   |                  |   |               |
|---|------------------|---|---------------|
|    | Program          |    | Shift + Sleep |
|    | Play Mode        |    | Shift + Play  |
|    | Music Port       |    | Media         |
|    | CD Play / Pause  |    | Play          |
|    | Tape Play        |    | Green         |
|    | USB Play / Pause |    | Yellow        |
|    | FM / AM          |    | Red           |
|    | Stop / Clear     |    | Stop          |
|    | Vol -            |    | Vol -         |
|    | Vol +            |    | Vol +         |
|   | Album -          |   | Left          |
|  | Album +          |  | Right         |
|  | I<< / << /       |  | I<<           |
|  | I<< / << /       |  | <<            |
|  | I<< / << /       |  | Down          |
|  | >>I / >> / Up    |  | >>I           |
|  | >>I / >> / Up    |  | >>            |



