

 
 

 

 

 

 



 

 

 
 
 
 
 


 
 

 
 
 

 

 

 

 
 
 




 
 
 


 
 

 

 




 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Audio		Dual
	Help		D. Menu
	Back		Back
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Exit		Exit
	Menu		Menu
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	CH + / Page +		Ch +
	CH - / Page -		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Timer		AV
	I<		I<<
	<<		<<
	>>		>>
	>I		>>I
	V.Mode		Format
	TV		TV/R
	Radio	+	Shift + TV/R
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

