 

 
 
 


 





 
 

 



 
 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | < |  | I<< |
|  | > |  | >>I |
|  | Menu |  | Menu |
|  | Guide |  | Guide |
|  | i |  | Info |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | OK |  | Ok |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Vol + |  | Vol + |
|  | Right |  | Right |
|  | Vol - |  | Vol - |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Playlist |  | List |
|  | Portal |  | Smart |
|  | Filelist |  | Media |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|-------------------------|-----------------------|---------------------|
| Rec | Rec | | |
| Play / Pause | Play | | |
| Play / Pause | Pause | | |
| Timer | AV | | |
| <<< | <<< | | |
| >>> | >>> | | |
| Stop | Stop | | |
| Text | Text | | |
| Audio | Dual | | |
| Subtitle | Subt | | |
| TV | TV/R | | |
| Radio | + TV/R Shift + TV/R | | |
| Help | D. Menu | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

