 

 
 
 


 





 
 

 



 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	<		I<<
	>		>>I
	Menu		Menu
	Guide		Guide
	i		Info

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up		Up
	OK		Ok
	Down		Down
	Left		Left
	Vol +		Vol +
	Right		Right
	Vol -		Vol -
	P+		Ch +
	P-		Ch -
	Playlist		List
	Portal		Smart
	Filelist		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Originalfernbedienung Ersatzfernbedienung

 Rec	 Rec
 Play / Pause	 Play
 Play / Pause	 Pause
 Timer	 AV
 <<	 <<
 >>	 >>
 Stop	 Stop
 Text	 TEXT
 Audio	 DUAL
 Subtitle	 SUBT
 TV	 TV/R
 Radio	 Shift + TV/R
 Help	 D. Menu

Originalfernbedienung Ersatzfernbedienung

