



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Tv/Radio		Audio / Lang I/I
	Subtitle		Subtitle / EQ
	Eject/Auto		Eject / Surround
	P.Mode		Picture / Format
	Zoom/Hold		Zoom / Size
	Sleep		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	D.Menu/Index		D.Menu / Top
	Goto/Subpage		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Angle/Text		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red / Del / Prog		Red / Netflix / Search
	Green / Rename		Green / APP / Repeat
	Yellow / Move / Repeat		Yellow / YouTube / Repeat
	Blue / Skip / A-B		Blue / Prime Video / Random
	I>/Lang	+	Shift + >>1 / Preset+

Originalfernbedienung Ersatzfernbedienung

	Nicam	+	Shift + Sound / Title
	Audio/Tv/Radio	+	Shift + Audio / Lang I/II
	Aspect	+	Shift + Picture / Format
	Title/Size	+	Shift + Zoom /
	D.Disp/Reveal	+	Shift + D.Menu / Top Menu
	I>/Lang	+	Shift + Right
	DVD Setup	+	Shift + 2
	FAV+	+	Shift + 9
	-/--	+	Shift + Guide / EPG / -/--
	FAV-	+	Shift + Fav / Marker / PC

