



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10 +		Guide
	Display		Info
	Subtitle		Subt
	Vol +		Vol +
	Vol -		Vol -

 

 
Originalfernbedienung    Ersatzfernbedienung

	Search		TV/R
	Setup		Options
	Title		List
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	PBC		Smart
	Menu		Menu
	Audio		Dual
	Zoom		Shift + Eject
	USB / Card		Media
	Step II >		Shift + Pause
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause





**Originalfernbedienung Ersatzfernbedienung**

	I << Prev		I <<
	Next >>I		>>I
	<< Rev		<<
	Fwd >>		>>
	L / R	 + 	Shift + Dual
	N / P		3D
	Angle		Format
	Mute		Mute
	Program		Sleep
	Clear		Exit
	Repeat		Text
	A - B	 + 	Shift + Text
	V - Mode		Green
	TV - Mode		Yellow
	Slow	 + 	Shift + Play
	Return		Back

**Originalfernbedienung Ersatzfernbedienung**