





 




 



 

 

 


 





 

 

 



 







 

 
 


 
 


 





 







Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	More		Display / Media
	?		Guide / EPG / -/--
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS











 

 








 

 

 

 


Originalfernbedienung    Ersatzfernbedienung

	OPT		Setup / OPT /
	SFI		Picture / Format
	TV / Radio		TV/Radio /
	Genre		Smart / List
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Down		Down
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung







 





 



 

 



 



 





 

	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Prog -		CH- / Page-
	Prog +		CH+ / Page+
	Volume -		Vol-
	Volume +		Vol+
	TXT		Text / Goto
	Still	 + 	Shift + Pause / Step /
	Sound		Sound / Title
	PIP		D.Menu / Top
	Menu		Menu / Home
	HDMI	 + 	Shift + 0

Originalfernbedienung Ersatzfernbedienung

 

 



 







 

 
 


 
 


 





 








**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	More		Fav / Marker / PC
	?		Smart / List
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Aspect / Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS








 

 










 
 

**Originalfernbedienung    Ersatzfernbedienung**

	OPT		Setup / OPT /
	SFI		Display / Media
	TV / Radio		TV/Radio /
	Genre		D.Menu / Top
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Down		Down
	<<		<< / Tune-





**Originalfernbedienung Ersatzfernbedienung**







 





 



 

 



 



 





 

	Stop		Stop / Hold
	Play / Pause		Play / Slow
	>>		>> / Tune+
	Prog -		CH- / Page-
	Prog +		CH+ / Page+
	Volume -		Vol-
	Volume +		Vol+
	TXT		Text / Goto
	I> / Still		Pause / Step / Freeze
	Sound		Sound / Title
	PIP		Picture / Format
	Menu		Menu / Home
	HDMI		Shift + 0

**Originalfernbedienung Ersatzfernbedienung**

 

 



 







 
 
 



 



 





 








Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	More		Display / Media
	?		Guide / EPG / -/--
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS

 











 

 


 


 





 

Originalfernbedienung    Ersatzfernbedienung

	OPT		Setup / OPT /
	SFI		Picture / Format
	TV / Radio		TV/Radio /
	Genre		Smart / List
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Down		Down
	<<		<< / Tune-





**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Prog -		CH- / Page-
	Prog +		CH+ / Page+
	Volume -		Vol-
	Volume +		Vol+
	TXT		Text / Goto
	Still		Shift + Pause / Step /
	Sound		Sound / Title
	PIP		D.Menu / Top
	Menu		Menu / Home
	HDMI		Shift + 0

**Originalfernbedienung Ersatzfernbedienung**