





 


 
 
 


 




 

 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	I / II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	CH.List		List
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

	Source		AV
	Menu		Menu
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Info		Info
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Aspect		Format
	CH +		Ch +
	CH -		Ch -
	Play/Pause / EPG		Guide
	Play/Pause / EPG		Play



