 



 

 





 
 
 
 


 


 


 

 







 

 




 

 




 
 
 

 
 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV Set Power		Shift + Power
	TV Set V +		Vol +
	TV Set V -		Vol -
	Mute		Mute
	TV Mode		Options
	TV / Rad		TV/R
	Find		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Recall		Back
	Audio		Dual
	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Sat		AV
	Fav		Pre Ch
	PG +		Ch +
	PG -		Ch -
	YouTube		Smart
	Play / PauInfo		Info
	EPG		Guide





**Originalfernbedienung    Ersatzfernbedienung**

	Play / Pause		Play
	Play / Pause		Pause
	<< FB		<<
	>> FF		>>
	Stop		Stop
	I<< Prev		I<<
	>>I Next		>>I
	Sleep		Sleep
	Sub-T		Subt
	Text		Text
	Rec		Rec
	Red / IPTV		Red
	Green / Video		Green
	Yellow / PVR		Yellow
	Blue / Timer		Blue

**Originalfernbedienung    Ersatzfernbedienung**