 




 

 



 



 





 




 


 
 
 
 





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung    Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	EPG		Guide
	Goto		Shift + Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Pg Up		Shift + Up
	PG Dn		Shift + Down
	CH+		Ch +
	CH-		Ch -
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Lang		Dual
	Timeshift		Smart
	Tv/Radio		TV/R
	Repeat	+	Shift + Text
	Red / Zoom		Red
	Green / Aspect		Green
	Yellow / V-Format		Yellow
	Blue / Timer		Blue

Originalfernbedienung Ersatzfernbedienung