 







 

 

 



 









 

 

 








Originalfernbedienung Ersatzfernbedienung





















 





 

 
 



 
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Audio I/II		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH +		CH+ / Page+
	Index		Display / Media
	Vol +		Vol+
	CH -		CH- / Page-
	List		Smart / List
	Vol -		Vol-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search













 











 



 







 

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Green / >>>	 >>> / Tune+		
 Green / >>>	 Green / APP / Repeat		
 Yellow /  <<<	  <<< / Preset-		
 Yellow /  <<<	 Yellow / YouTube / Repeat		
 Blue / >>>	 >>>  / Preset+		
 Blue / >>>	 Blue / Prime Video / Random		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Play / Slow		
 Text / Play/Pause	 Pause / Step / Freeze		
 Stop / Still	 Stop / Hold		
 Radio	 TV/Radio /		
 Size / Aspect	 Picture / Format		
 Size / Aspect	 Zoom / Size		
 [≡x]	 Eject / Surround		
 Subtitle / [≡o]	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>		>>  / Preset+
	[≡]		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡+]		Shift + Stop /
	Stop/Still		Stop / Hold
	Radio		TV/Radio /
	[≡◆]/[++]		Zoom / Size
	[≡x]		Eject / Surround
	[≡o]/Subtitle		Subtitle / EQ
	DMP		D.Menu / Top
	Rec		Rec / Rec Mode

