






 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Shift + Exit / Cancel / Clear
	Audio		Audio / Lang I/II
	Open/Close		Eject / Surround
	PIP		Picture / Format
	Internet		Smart / List
	Audio		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	<< Search		<< / Tune-
	Play		Play / Slow
	Search >>		>> / Tune+
	I<< Skip		I<< / Preset-
	Pause		Pause / Step / Freeze
	Skip >>I		>>I / Preset+
	Stop		Stop / Hold
	Exit		Exit / Cancel / Clear
	Status		Info / Angle
	Option		Setup / OPT /
	Return		Back / Return
	Top Menu		D.Menu / Top
	Home		Menu / Home
	Pop-Up Menu		Display / Media
	Up		Up
	Down		Down
	Right		Right



Secondary



Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Left		Left				
	OK		OK				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Tv Vol+		Vol+				
	Power TV		Shift + Power				
	Tv Vol-		Vol-				
	AV Input TV		AV / Input / RDS				

