

 

 
 
 

 

 







 
 
 
 
 










 
 


 


 


 

 













 


 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Ch.List		List
	P +		Ch +
	P -		Ch -
	Media.P		Media
	Menu		Menu
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red		Red
	Green		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Yellow		Yellow
	Blue		Blue
	P.Mode	+	Shift + Format
	Dual I/II		Dual
	3D		3D
	AD	+	Shift + Subt
	P.Size		Format
	Subt.		Subt
	<<<		<<<
	Pause		Pause
	>>>		>>>
	Rec		Rec
	Play		Play
	Stop		Stop

