



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause/[≡]		Pause / Step / Freeze
	Stop/[≡+]		Stop / Hold
	Rec/[≡◆]		Rec / Rec Mode
	<</[≡o]		<< / Tune-
	<</[≡i]		<< / Preset-
	>> /[≡?]		>> / Preset+
	>>/[≡x]		>> / Tune+
	Info		Info / Angle
	OI/II/Audio		Audio / Lang I/II
	[≡]		Text / Goto
	←/<x]		Fav / Marker / PC
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*		Setup / OPT /
	0		0
	Up		Up
	[→]		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Netflix		Shift + Red / Netflix /
	You Tube		Shift + Yellow / YouTube /
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	Home / Source		Menu / Home
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/--
	List		Smart / List
	Q.Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause [/≡]		Pause / Step / Freeze
	Stop/[≡+]		Stop / Hold
	Rec/[≡◆]		Rec / Rec Mode
	<</[≡o]		<< / Tune-
	<</[≡i]		<< / Preset-
	>> /[≡?]		>> / Preset+
	>> /[≡x]		>> / Tune+
	Info		Info / Angle
	O) /II/Audio		Audio / Lang I/II
	[≡]		Text / Goto
	←/<x]		Fav / Marker / PC
	1		1
	2		2
	3		3



















 

 

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*		Setup / OPT /
	0		0
	[→]		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	Home/Source		Menu / Home
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	EPG		Guide / EPG / -/-
	List		Smart / List
	Q.Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

