
 








 




 
 


 

 
 
 


 



 









 


 





 
 




 





 

 





 


 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Epg	 + 	Shift + Guide	
Subt.List		Subt	
Opt?		Options	
App		Media	
Info	 + 	Shift + Info	
Sleep Timer		Sleep	
TV		TV/R	
Video		D. Menu	
Text		Text	
Zoom		Eject	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
CH/Page+		Ch +	
Audio		Dual	
Volume-		Vol -	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	




 


 



 






 
 
Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8tuv		8	8
9wxyz		9	9
Guide Pilote		Guide	
0/10		0	
FAV Pref.		Pre Ch	
Red		Red	
Green		Green	
West		I<<	
Dev		3D	
Yellow		Yellow	
Freeze		Stop	
Blue		Blue	
On/Off	 + 	Shift + Power	
SAT Sky		Smart	
Home Cinema		List	
East		>>I	
Lang./Rewind		<<	
		H/V Play	
		LNB F.Forward	



**Originalfernbedienung Ersatzfernbedienung**

PWR On/Off		Power
Mute		Mute
Epg	 + 	Shift + Guide
Sleep Timer		Sleep
Opt?		Options
App		Media
Info	 + 	Shift + Info
TV		TV/R
Video		D. Menu
Text		Text
Zoom		Eject
TV/SAT		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok

**Originalfernbedienung Ersatzfernbedienung**

Menu Right		Right
Exit		Exit
Menu Down		Down
Back		Back
Audio		Dual
Volume+		Vol +
CH/Page+		Ch +
Volume-		Vol -
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
9wxyz	 9	East	 >>
Guide Pilote	 Guide	Lang./Rewind	 <<
0/10	 0	H/V Play	 Play
FAV Pref.	 Pre Ch	LNB F.Forward	 >>
Freeze	 Stop		
Scan/Setup	 +  Shift + Options		
Red	 Red		
Auth./DISEQC	 List		
Green	 Green		
Radio	 +  Shift + TV/R		
Yellow	 Yellow		
Blue	 Blue		
Home Cinema	 Smart		
Alt/16:9	 Format		
SAT Sky	 +  Shift + AV		
Dec/Pause	 Pause		
	 +  Shift + Exit		

