


 






 
 


 

 

 
 






 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------------|
|  | Power TV |  | Power |
|  | Power STB |  | Shift + Power |
|  | Source |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | TTX/MIX |  | Text |
|  | PRE-CH |  | Pre Ch |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | Mute |  | Mute |
|  | CH.List |  | List |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | Menu |  | Menu |
|  | Smart Hub |  | Smart |
|  | Guide |  | Guide |
|  | Tools |  | Options |
|  | Info |  | Info |
|  | Back/Return |  | Back |
|  | Exit |  | Exit |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Red |  | Red |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---|-----------------------|---------------------|
|  Green |  Green | | |
|  Yellow |  Yellow | | |
|  Blue |  Blue | | |
|  D |  Dual | | |
|  Status |  TV/R | | |
|  More |  3D | | |
|  E-Manual |  D. Menu | | |
|  Recommend |  Format | | |
|  AD/Subt |  Subt | | |
|  <<< |  <<< | | |
|  I<<< |  I<<< | | |
|  Pause |  Pause | | |
|  >>> |  >>> | | |
|  >>I |  >>I | | |
|  Rec |  Rec | | |
|  Play |  Play | | |
|  Stop |  Stop | | |

