


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	EPG		Guide
	Menu		Menu
	Exit		Exit
	Up / CH +		Up






 


Originalfernbedienung Ersatzfernbedienung

	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	PG +		Shift + Ch +
	PG -		Shift + Ch -
	TV / Radio		TV/R
	SUB		Subt
	TTX		Text
	Audio		Dual
	Last		Back
	Mode		Smart
	White / Favor		Sleep





Originalfernbedienung Ersatzfernbedienung

 FAVOR	White / Favor	 FAV PRE-CH	Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

