
 

 



















 




 




 







**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	More		Display / Media
	?		Guide / EPG / -/--
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS

**Originalfernbedienung    Ersatzfernbedienung**






	OPT		Setup / OPT /
	SFI		Picture / Format
	TV / Radio		TV/Radio /
	Genre		Smart / List
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Info		Info / Angle
	<<		<< / Tune-



 



















 




 




 







Originalfernbedienung    Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	More		Display / Media
	?		Guide / EPG / -/--
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS

Originalfernbedienung    Ersatzfernbedienung

	OPT		Setup / OPT /
	SFI		Picture / Format
	TV / Radio		TV/Radio /
	Genre		Smart / List
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Info		Info / Angle
	<<		<< / Tune-



 



















 

 
 














**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	More		Display / Media
	?		Guide / EPG / -/--
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS

**Originalfernbedienung    Ersatzfernbedienung**

	OPT		Setup / OPT /
	SFI		Picture / Format
	TV / Radio		TV/Radio /
	Genre		Smart / List
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Info		Info / Angle
	<<		<< / Tune-



