 










 

 

 



 




 

 


 


 


 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<<		<<
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Fav		Pre Ch
	AV		AV
	[1 1 2]		Smart
	White / Option		Options
	Menu / Browse		Menu
	Teletext		Text
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Info		Info
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	P +		Ch +
	P -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	P<P		Back

Originalfernbedienung Ersatzfernbedienung

