







 
 
 

 



 

 



 



 






 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|--------|
|  | TV |  | TV/R |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | SAT TNT |  | Smart |
|  | HD |  | Media |
|  | V + |  | Vol + |
|  | V - |  | Vol - |
|  | Chaines Preferees |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------|
|  | Silence |  | Mute |
|  | P + |  | Ch + |
|  | P - |  | Ch - |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Pilote |  | Options |
|  | Menu |  | Menu |
|  | Guide |  | Guide |
|  | Retour |  | Back |
|  | Serv |  | Text |
|  | Sortie |  | Exit |
|  | << |  | << |
|  | Play |  | Play |
|  | >> |  | >> |



