



 



 
 

 


 




 



 




 



 
 

 



 

 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Info		Info	
Sleep Timer		Sleep	
TV		Smart	
Video		AV	
Text		Text	
Menu		Menu	
Display	 + 	Shift + Info	
Menu Up		Up	
Menu Down		Down	
Menu Right		Right	
Menu Left		Left	
OK Enter		Ok	
Exit		Exit	
Volume+		Vol +	
Volume-		Vol -	
CH/Page+		Ch +	
Audio		Dual	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	
9wxyz		9	
Guide Pilote		Guide	
0/10		0	
FAV Pref.		Pre Ch	
Red		Red	
Green		Green	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Yellow			Yellow
Blue			Blue
Freeze			3D
Dec/Pause			Pause
Help			D. Menu
East			Options
Lang./Rewind			<<
Radio			TV/R
H/V Play			Play
LNB F.Forward			>>

