





Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Sleep	 Sleep / Timer
 Mute	 Mute / Dimmer
 iPod Menu	 Menu / Home
 Menu Up	 Up
 Source	 AV / Input / RDS
 I<<	 I<< / Preset-
 Enter	 OK
 >>I	 >>I / Preset+
 Mem Time	 TV/Radio /
 Menu Down	 Down
 Play / Pause	 Play / Slow
 Treble +	 CH+ / Page+
 Bass +	 Right
 Volume +	 Vol+
 Treble -	 CH- / Page-
 Bass -	 Left

Originalfernbedienung	Ersatzfernbedienung
 Volume -	 Vol-

