









 





 



















 

 


 
 

 



 

 



 

 

 

 
 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Radio		TV/Radio /
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Goto		Shift + Text /
	0		0
	Fav		Fav / Marker / PC
	Info		Info / Angle
	CH Back		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up / CH +		Shift + Up
	Up / CH +		Up
	Exit		Exit / Cancel / Clear
	Left / Vol -		Shift + Left
	Left / Vol -		Left
	OK		OK
	Right / Vol +		Shift + Right
	Right / Vol +		Right
	EPG		Guide / EPG / -/-
	Down / CH -		Shift + Down
	Down / CH -		Down
	TXT		Text / Goto
	SUB		Subtitle / EQ
	Audio		Audio / Lang I/II
	<< REV		<< / Tune-
	>> FWD		>> / Tune+




**Originalfernbedienung**   **Ersatzfernbedienung**

	I<< Prev		I<< / Preset-
	>>I Next		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Repeat		Shift + Green / APP / REPEAT
	Page +		CH+ / Page+
	Page -		CH- / Page-
	PVR		Smart / List
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	Green / V-Format		Shift + Yellow / YouTube / REPEAT A-B
	Green / V-Format		Green / APP / Repeat
	Yellow / Aspect		Yellow / YouTube / Repeat
	Blue / Timer		Shift + Blue / Prime / Prime
	Blue / Timer		Blue / Prime Video / Random

**Originalfernbedienung**   **Ersatzfernbedienung**