






 
 
 
 

 

 
 
 

 






 
 

 


 


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Play	
Reveal		Pause	
Txt Stop		Stop	
Info	 +  Shift + Info	Shift + Info	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung





 
 

 
 

 
 
 
 



8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Audio-		Shift + Play
Audio+		Shift + Pause
Tone-		I<<
Tone+		Shift + >>I
On/Tim		Shift + Subt
Off/Tim		Shift + Sleep
Disp		List
Color+ P.Std		>>

Originalfernbedienung Ersatzfernbedienung


 





 
 
 







Mix Scan		Shift + TV/R
Tune-		Shift + Left
Aft/Caf		Shift + Ok
Tune+		Shift + Right
Bright- Sys		Shift + Exit
Contrast+		Shift + Ch +
Color- S.Std		<<
Contrast-		Shift + Ch -
3.*		Shift + Guide
4.# 16:9		Format
Surround		Shift + Red
Nicam/Mono		Shift + Green
Level L		Shift + Yellow
Level R/Woofer		Shift + Blue



**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Mute		Mute
Reveal		Pause
Txt Stop		Stop
Info		Shift + Info
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left
OK Enter		Ok
Menu Right		Right

**Originalfernbedienung Ersatzfernbedienung**

Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
0/10			0
2.Fav P/C 2.			Pre Ch
Red			Red
Green			Green
Yellow			Yellow
Blue			Blue
Tone+			Smart

