





 















 




 


 








 

















 












Originalfernbedienung    Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Pro. List		Smart / List
	0		0
	Last		Back / Return
	Info		Info / Angle
	Up		Up
	Menu		Menu / Home

Originalfernbedienung    Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	EPG		Guide / EPG / -/--
	Down		Down
	Text		Text / Goto
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	I/I-II		Display / Media
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡i]/Index	 + 	Shift + AV / Input / RDS



