



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / R		TV/Radio /
	0		0
	Text		Text / Goto
	Red / V-FMT		Display / Media
	Red / V-FMT		Red / Netflix / Search
	Green		Green / APP / Repeat

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Sleep / Timer
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Left / V-		Vol-
	Left / V-		Left
	OK		OK
	Right / V+		Vol+
	Right / V+		Right
	Down / CH-		Down
	Down / CH-		CH- / Page-
	EPG		Guide / EPG / -/-
	Menu		Menu / Home
	SUB		Subtitle / EQ
	FAV		Fav / Marker / PC
	Back		Back / Return





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	FRW		<< / Tune-
	FFW		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Info		Info / Angle
	USB	+	Shift + 8
	Option		Setup / OPT /
	Movie		Smart / List

