









 





 



 





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Muting		Mute / Dimmer
	Track >>		>>  / Preset+
	Function Up		CH+ / Page+
	Volume Up		Vol+
	I<< Track		I<< / Preset-
	Function Down		CH- / Page-
	Volume Down		Vol-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow

Originalfernbedienung    Ersatzfernbedienung