






























Originalfernbedienung Ersatzfernbedienung




 






 









 



 














 
 
 


 



 


 
 



 

 



 

 


| | | | |
|---|---------------|---|--------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | SUB |  | Subt |
|  | TXT |  | Text |
|  | EPG |  | Guide |
|  | Language |  | Dual |
|  | Go To |  | Smart |
|  | Repeat |  | Shift + Text |
|  | Page + |  | Shift + Ch + |
|  | Page - |  | Shift + Ch - |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up / CH + |  | Up |
|  | Down / CH - |  | Down |
|  | Right / Vol + |  | Right |
|  | Left / Vol - |  | Left |
|  | OK |  | Ok |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|--------|
|  | FAV |  | Pre Ch |
|  | TV / Radio |  | TV/R |
|  | Up / CH + |  | Ch + |
|  | Down / CH - |  | Ch - |
|  | Right / Vol + |  | Vol + |
|  | Left / Vol - |  | Vol - |
|  | Recall |  | Back |
|  | Info |  | Info |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|---|---------------------|---|---------------------|
|  | Standby |  | Power |
|  | Sub-T |  | Subt |
|  | TTX |  | Text |
|  | Mute |  | Mute |
|  | EPG |  | Guide |
|  | Audio |  | Dual |
|  | GOTO |  | Shift + Guide |
|  | Repeat |  | Shift + Text |
|  | Page + |  | Shift + Up |
|  | Page - |  | Shift + Down |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Up / CH + |  | Up |
|  | Up / CH + |  | Ch + |
|  | Down / CH - |  | Down |
|  | Down / CH - |  | Ch - |
|  | Right / Vol + |  | Right |
|  | Right / Vol + |  | Vol + |
|  | Left / Vol - |  | Left |
|  | Left / Vol - |  | Vol - |
|  | OK |  | Ok |
|  | FAV |  | Shift + Pre Ch |
|  | TV / Radio |  | TV/R |
|  | Recall |  | Pre Ch |
|  | Info |  | Info |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | 0 | | 0 |
| | << Rev | | << |
| | >> Fwd | | >> |
| | I<< Prev | | I<< |
| | >>I Next | | >>I |
| | Play | | Play |
| | Pause / Timeshift | | Pause |
| | Stop | | Stop |
| | Rec | | Rec |
| | Red / PVR | | Red |
| | Green / V-Format | | Green |
| | Green / V-Format | | Format |
| | Yellow / Aspect | | Yellow |
| | Yellow / Aspect | | Shift + Format |
| | Blue / Timer | | Blue |
| | Blue / Timer | | AV |

