






 
 



 




 

 





 

 







Originalfernbedienung	Ersatzfernbedienung
 DSG	 Picture / Format
 Display	 Display / Media
 Power	 Power
 Play CD	 Play / Slow
 Pause CD	 Pause / Step / Freeze
 Stop CD	 Stop / Hold
 Play	 Shift + Play /
 I<</ Tuner/band	 I<< / Preset-
 >>I/+ Tuner	 >>I / Preset+
 Play Tape	 Shift + Pause / Step /
 << Tape	 << / Tune-
 >> Tape	 >> / Tune+
 Dir Mode	 D.Menu / Top
 Dolby NR	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 CD Repeat	 3
 Stereo/Mono	 Sound / Title

Originalfernbedienung	Ersatzfernbedienung
 Tuning/Play Mode	 Smart / List
 Up/Memory	 Up
 Vol+	 Vol+
 Left/Timer Set	 Left
 Enter/On/Off	 OK
 Right/Timer	 Right
 Down/Sleep	 Down
 Vol-	 Vol-

