




 

 
 


 
 
 
 
 




 




 
 

 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Library		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Rec		Rec
	Last		Pre Ch
	I<		I<<
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	>		>>
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol +		Vol +
	Vol -		Vol -
	Guide		Guide
	Menu		Menu
	Prog +		Ch +
	Prog -		Ch -
	Back		Back





Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Text		Text
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	AD	+	Shift + Subt
	Subt		Subt
	Audio		Dual
	A/V		AV
	HDMI		Media
	Wide		Format

Originalfernbedienung Ersatzfernbedienung

