
 




Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	REC		Rec / Rec Mode
	0 / AV		0
	0 / AV		AV / Input / RDS
	OPT		Setup / OPT /
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green / Stop		Stop / Hold
	Green / Stop		Green / APP / Repeat
	Yellow /		Play / Slow
	Yellow /		Yellow / YouTube / Repeat
	Blue / Aspect /		Picture / Format
	Blue / Aspect /		Blue / Prime Video / Random
	Blue / Aspect /		>> / Tune+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI / EPG		Guide / EPG / -/-
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+

 












**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	REC		Rec / Rec Mode
	0 / AV		AV / Input / RDS
	0 / AV		0
	OPT		Setup / OPT /
	Red / <<		<< / Tune-
	Red / <<		Red / Netflix / Search

**Originalfernbedienung    Ersatzfernbedienung**

	Green / Stop		Green / APP / Repeat
	Green / Stop		Stop / Hold
	Yellow /		Play / Slow
	Yellow /		Yellow / YouTube / Repeat
	Blue / >> /		>> / Tune+
	Blue / >> /		Picture / Format
	Blue / >> /		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI / EPG		Guide / EPG / -/-
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+









**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	REC		Rec / Rec Mode
	0 / AV		AV / Input / RDS
	0 / AV		0
	OPT		Setup / OPT /
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

**Originalfernbedienung    Ersatzfernbedienung**

	Green / Stop		Green / APP / Repeat
	Green / Stop		Stop / Hold
	Yellow /		Play / Slow
	Yellow /		Yellow / YouTube / Repeat
	Blue / >> /		Blue / Prime Video / Random
	Blue / >> /		Picture / Format
	Blue / >> /		>> / Tune+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	SFI / EPG		Guide / EPG / -/-
	Exit / Recall		Exit / Cancel / Clear
	Exit / Recall		Back / Return
	Info		Info / Angle
	Prog +		CH+ / Page+



