
 




Originalfernbedienung Ersatzfernbedienung

|   |          |   |                        |
|---|----------|---|------------------------|
|    | Mute     |    | Mute / Dimmer          |
|    | Power    |    | Power                  |
|    | 1        |    | 1                      |
|    | 2        |    | 2                      |
|    | 3        |    | 3                      |
|    | 4        |    | 4                      |
|    | 5        |    | 5                      |
|    | 6        |    | 6                      |
|    | 7        |    | 7                      |
|    | 8        |    | 8                      |
|   | 9        |   | 9                      |
|  | REC      |  | Rec / Rec Mode         |
|  | 0 / AV   |  | 0                      |
|  | 0 / AV   |  | AV / Input / RDS       |
|  | OPT      |  | Setup / OPT /          |
|  | Red / << |  | << / Tune-             |
|  | Red / << |  | Red / Netflix / Search |

Originalfernbedienung Ersatzfernbedienung

|   |                 |   |                             |
|---|-----------------|---|-----------------------------|
|    | Green / Stop    |    | Stop / Hold                 |
|    | Green / Stop    |    | Green / APP / Repeat        |
|    | Yellow /        |    | Play / Slow                 |
|    | Yellow /        |    | Yellow / YouTube / Repeat   |
|    | Blue / Aspect / |    | Picture / Format            |
|    | Blue / Aspect / |    | Blue / Prime Video / Random |
|    | Blue / Aspect / |    | >> / Tune+                  |
|    | Up              |    | Up                          |
|    | Left            |    | Left                        |
|    | OK              |    | OK                          |
|   | Right           |   | Right                       |
|  | Down            |  | Down                        |
|  | SFI / EPG       |  | Guide / EPG / -/-           |
|  | Exit / Recall   |  | Exit / Cancel / Clear       |
|  | Exit / Recall   |  | Back / Return               |
|  | Info            |  | Info / Angle                |
|  | Prog +          |  | CH+ / Page+                 |





 
 









**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                        |
|---|----------|---|------------------------|
|    | Mute     |    | Mute / Dimmer          |
|    | Power    |    | Power                  |
|    | 1        |    | 1                      |
|    | 2        |    | 2                      |
|    | 3        |    | 3                      |
|    | 4        |    | 4                      |
|    | 5        |    | 5                      |
|    | 6        |    | 6                      |
|    | 7        |    | 7                      |
|    | 8        |    | 8                      |
|    | 9        |    | 9                      |
|  | REC      |  | Rec / Rec Mode         |
|  | 0 / AV   |  | AV / Input / RDS       |
|  | 0 / AV   |  | 0                      |
|  | OPT      |  | Setup / OPT /          |
|  | Red / << |  | << / Tune-             |
|  | Red / << |  | Red / Netflix / Search |

**Originalfernbedienung    Ersatzfernbedienung**

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | Green / Stop  |    | Green / APP / Repeat        |
|    | Green / Stop  |    | Stop / Hold                 |
|    | Yellow /      |    | Play / Slow                 |
|    | Yellow /      |    | Yellow / YouTube / Repeat   |
|    | Blue / >> /   |    | >> / Tune+                  |
|    | Blue / >> /   |    | Picture / Format            |
|    | Blue / >> /   |    | Blue / Prime Video / Random |
|    | Up            |    | Up                          |
|    | Left          |    | Left                        |
|    | OK            |    | OK                          |
|    | Right         |    | Right                       |
|  | Down          |  | Down                        |
|  | SFI / EPG     |  | Guide / EPG / -/-           |
|  | Exit / Recall |  | Exit / Cancel / Clear       |
|  | Exit / Recall |  | Back / Return               |
|  | Info          |  | Info / Angle                |
|  | Prog +        |  | CH+ / Page+                 |









**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                        |
|---|----------|---|------------------------|
|    | Mute     |    | Mute / Dimmer          |
|    | Power    |    | Power                  |
|    | 1        |    | 1                      |
|    | 2        |    | 2                      |
|    | 3        |    | 3                      |
|    | 4        |    | 4                      |
|    | 5        |    | 5                      |
|    | 6        |    | 6                      |
|    | 7        |    | 7                      |
|    | 8        |    | 8                      |
|   | 9        |   | 9                      |
|  | REC      |  | Rec / Rec Mode         |
|  | 0 / AV   |  | AV / Input / RDS       |
|  | 0 / AV   |  | 0                      |
|  | OPT      |  | Setup / OPT /          |
|  | Red / << |  | Red / Netflix / Search |
|  | Red / << |  | << / Tune-             |

**Originalfernbedienung    Ersatzfernbedienung**

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | Green / Stop  |    | Green / APP / Repeat        |
|    | Green / Stop  |    | Stop / Hold                 |
|    | Yellow /      |    | Play / Slow                 |
|    | Yellow /      |    | Yellow / YouTube / Repeat   |
|    | Blue / >> /   |    | Blue / Prime Video / Random |
|    | Blue / >> /   |    | Picture / Format            |
|    | Blue / >> /   |    | >> / Tune+                  |
|    | Up            |    | Up                          |
|    | Left          |    | Left                        |
|    | OK            |    | OK                          |
|   | Right         |   | Right                       |
|  | Down          |  | Down                        |
|  | SFI / EPG     |  | Guide / EPG / -/-           |
|  | Exit / Recall |  | Exit / Cancel / Clear       |
|  | Exit / Recall |  | Back / Return               |
|  | Info          |  | Info / Angle                |
|  | Prog +        |  | CH+ / Page+                 |



