











 


 

 

 

 









 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Stop		Stop
	Pause		Pause
	Rec		Rec
	<<		<<
	Play		Play
	>>		>>
	*		Menu
	Search		TV/R
	Bluetooth		Pre Ch
	TV Guide		Guide
	List		List
	Sources		AV
	Smart Tv		Smart
	Home		Shift + Smart
	Exit/TV		Exit
	Red		Red

**Originalfernbedienung Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Info		Info
	Options		Options
	←/Back		Back
	[<>]/Format		Format
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Media
	CH+		Ch +





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	CH-		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Subtitle		Subt				
	Text		Text				

