




Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Display Receiver		Info
	Enter Receiver		Ok
	Up Receiver		Up
	Down Receiver		Down
	Right Receiver		Right
	Left Receiver		Left
	Return Receiver		Back
	Setup Receiver		Options
	Home/Audio		Smart
	Play Receiver		Play
	I<< Receiver		I<<
	>>I Receiver		>>I
	<< Receiver		<<
	>> Receiver		>>
	Pause/Play reverse Receiver		Pause
	Stop Receiver		Stop

Originalfernbedienung Ersatzfernbedienung

	1 Receiver		1
	2 Receiver		2
	3 Receiver		3
	4 Receiver		4
	5 Receiver		5
	6 Receiver		6
	7 Receiver		7
	8 Receiver		8
	9 Receiver		9
	0/11 Receiver		0
	+10/--/--10/Dimmer/D.Tun Receiver		Guide
	CLR/Sleep/12 Receiver		Pre Ch
	SEARCH/Movie/Tv/Search Receiver		Red
	Music/Repeat Receiver		Green
	Game/Random Receiver		Yellow
	THX/Mode		Blue
	Muting		Mute

 
 








Originalfernbedienung Ersatzfernbedienung

	Vol+ Receiver		Vol +
	Vol- Receiver		Vol -
	CH/Disc/Album+ Receiver		Ch +
	CH/Disc/Album- Receiver		Ch -
	Menu USB		Menu
	Top Menu USB		Shift + Menu
	Mode USB		Format
	Search USB		TV/R
	Random USB		Eject
	Repeat USB		Text
	Return USB		Shift + Back
	Right USB		Shift + Right
	Down USB		Shift + Down
	Enter USB		Shift + Ok
	Left USB		Shift + Left
	Up USB		Shift + Up
	Display USB		Shift + Info

Originalfernbedienung Ersatzfernbedienung

	Setup USB		Shift + Options
	Play USB		Shift + Play
	<< USB		Shift + <<
	>> USB		Shift + >>
	Pause USB		Shift + Pause
	Stop USB		Shift + Stop
	>>I USB		Shift + >>I
	I<< USB		Shift + I<<
	TV / CD		Shift + 8
	TUNER		Shift + 7
	PORT		Shift + 9
	AUX		Shift + 6
	VCR / DVR		Shift + 2
	GAME		Shift + 4
	PC		Shift + 5
	CBL / SAT		Shift + 3
	BD / DVD		Shift + 1





Originalfernbedienung Ersatzfernbedienung

NET	NET	SHIFT + GUIDE	Shift + Guide
USB	USB	SHIFT + 0	Shift + 0

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power BD/DVD		Power
	Menu/Prev CH		Menu
	Top Menu/Guide BD/DVD		Options
	Setup BD/DVD		Smart
	Return BD/DVD		Back
	Audio/Home		Media
	Enter BD/DVD		Ok
	Up BD/DVD		Up
	Down BD/DVD		Down
	Right BD/DVD		Right
	Left BD/DVD		Left
	I<< BD/DVD		I<<
	>>I BD/DVD		>>I
	<< BD/DVD		<<
	>> BD/DVD		>>
	Play BD/DVD		Play
	Pause/Play rev. BD/DVD		Pause

Originalfernbedienung Ersatzfernbedienung

	Stop BD/DVD		Stop
	Movie Tv/Search BD/DVD		Red
	Music/Repeat		Green
	Game/Random		Yellow
	Stereo/Play Mode BD/DVD		Blue
	1 BD/DVD		1
	2 BD/DVD		2
	3 BD/DVD		3
	4 BD/DVD		4
	5 BD/DVD		5
	6 BD/DVD		6
	7 BD/DVD		7
	8 BD/DVD		8
	9 BD/DVD		9
	0/11 BD/DVD		0
	+10/--/-10/D.Tun/Dimmer BD/DVD		Guide
	CLR/Sleep/12		Pre Ch













 
 
 

 

 

 

 

 

 

 







BD/DVD



Originalfernbedienung Ersatzfernbedienung

	CBL/SAT		Text
	Muting Receiver		Mute
	Vol+ Receiver		Vol +
	Vol- Receiver		Vol -
	Power CBL/SAT		Shift + Power
	CH Disc/Album+ CBL/SAT		Ch +
	CH Disc/Album- CBL/SAT		Ch -
	Menu/Prev CH CBL/SAT		Shift + Menu
	Top Menu/Guide CBL/SAT		Shift + Options
	Return CBL/SAT		Shift + Back
	Setup CBL/SAT		Shift + Smart
	Up CBL/SAT		Shift + Up
	Enter CBL/SAT		Shift + Ok
	Down CBL/SAT		Shift + Down
	Right CBL/SAT		Shift + Right
	Left CBL/SAT		Shift + Left
	Pause/Play rev. CBL/SAT		Shift + Pause

Originalfernbedienung Ersatzfernbedienung

 


 

	Stop CBL/SAT		Shift + Stop
	<< CBL/SAT		Shift + Ch -
	>> CBL/SAT		Shift + Ch +
	Play CBL/SAT		3D
	Movie Tv/Search CBL/SAT		Dual
	Music/Repeat CBL/SAT		Subt
	Game/Random		AV
	Stereo/Play Mode CBL/SAT		Format
	1 CBL/SAT		Shift + 1
	2 CBL/SAT		Shift + 2
	3 CBL/SAT		Shift + 3
	4 CBL/SAT		Shift + 4
	5 CBL/SAT		Shift + 5
	6 CBL/SAT		Shift + 6
	7 CBL/SAT		Shift + 7
	8 CBL/SAT		Shift + 8
	9 CBL/SAT		Shift + 9





Originalfernbedienung

Ersatzfernbedienung

 0	0/11 CBL/SAT	 + 	Shift + 0
 BD/DVD	DVD/BD	 SEARCH TV/R	TV/R

 



 

 
 

 
 



 
 

 





 





Originalfernbedienung

Ersatzfernbedienung


 
 
 

 

 


 

 
 
 
 

 


 
 
 
 
 

 
 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	CH/Disc+ CD		Ch +
	CH/Disc- CD		Ch -
	Return CD		Back
	Setup CD		Smart
	Audio/Home CD		Media
	Up CD		Up
	Down CD		Down
	Right CD		Right
	Left CD		Left
	Enter CD		Ok
	I<< CD		I<<
	>>I CD		>>I
	<< CD		<<
	>> CD		>>
	Play CD		Play
	Pause CD		Pause

Originalfernbedienung Ersatzfernbedienung







 
 
	Stop CD		Stop
	Movie Tv/Search		Red
	Music/Repeat		Green
	Game/Random		Yellow
	Stereo/Play Mode		Blue
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0/11 CD		0
	+10/--10/D.Tun/ Dimmer CD		Guide
	CLR/Sleep/12		Pre Ch



CD



Originalfernbedienung Ersatzfernbedienung



 
 













 

 



 

 
 





 
	Muting Receiver		Mute
	Vol+ Receiver		Vol +
	Vol- Receiver		Vol -
	TV/CD		TV/R

Originalfernbedienung Ersatzfernbedienung

 

 




Originalfernbedienung Ersatzfernbedienung

	Power Receiver Zone 2		Power
	Muting Receiver		Mute
	Vol+ Zone 2		Vol +
	Vol- Zone 2		Vol -
	CH Disc/Album+ Zone 2		Ch +
	CH Disc/Album- Zone 2		Ch -
	Up Zone 2		Up
	Enter Zone 2		Ok
	Down Zone 2		Down
	Right Zone 2		Right
	Left Zone 2		Left
	Return Zone 2		Back
	Setup Zone 2		Smart
	Audio/Home Zone		Media
	I<< Zone 2		I<<
	>>I Zone 2		>>I
	Play Zone 2		Play

Originalfernbedienung Ersatzfernbedienung

	>> Zone 2		>>
	<< Zone 2		<<
	Pause Zone 2		Pause
	Stop Zone 2		Stop
	Movie Tv/Search Zone 2		Red
	Music/Repeat		Green
	Game/Random		Yellow
	Stereo/Play Mode Zone 2		Blue
	1 Zone 2		1
	2 Zone 2		2
	3 Zone 2		3
	4 Zone 2		4
	5 Zone 2		5
	6 Zone 2		6
	7 Zone 2		7
	8 Zone 2		8
	9 Zone 2		9





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	0/11 Zone 2		0				
	+10/--/--10/D.Tun/ Dimmer Zone 2		Guide				
	CLR/Sleep/12		Pre Ch				

