







 












 

 





 



 




**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	PRE-CH		Pre Ch
	TV		TV/R
	CH.MGR		Smart
	Wiselink		Media

**Originalfernbedienung    Ersatzfernbedienung**

	Stop		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P-		Ch -
	P+		Ch +
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok


 


























**Originalfernbedienung    Ersatzfernbedienung**

	[≡?]/Info		Info
	[≡+]/PIP		3D
	TTX/MIX		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	I-II/Dual		Dual
	(O)/SRS		Back
	Source (Green)		Shift + AV
	PC		List
	[▼]/STTL		Subt
	[<>]/Size		Format
	[≡◆]/P.Mode		Shift + Format
	[≡]/S.Mode		Options
	Sleep		Sleep
	Power Cable		Shift + Power







 
 

 









 

 











**Originalfernbedienung    Ersatzfernbedienung**

	1 Cable		Shift + 1
	2 Cable		Shift + 2
	3 Cable		Shift + 3
	4 Cable		Shift + 4
	5 Cable		Shift + 5
	6 Cable		Shift + 6
	7 Cable		Shift + 7
	8 Cable		Shift + 8
	9 Cable		Shift + 9
	0 Cable		Shift + 0
	P+ Cable		Shift + Ch +
	P- Cable		Shift + Ch -



 

 













**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	<<		<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>






 








 









**Originalfernbedienung    Ersatzfernbedienung**

	Menu		Menu
	Exit		Exit
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	[≡?]/Info		Info












 






 










**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Pre Ch
	TV		TV/R
	Sleep		Sleep
	P+		Ch +
	P-		Ch -
	<<		<<

**Originalfernbedienung    Ersatzfernbedienung**

	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	[≡?]/Info		Info
	[<>]/Size		Format
	Source		AV





Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	<<		<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>		>>

Originalfernbedienung    Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Exit		Exit
	[≡?]/Info		Info

