



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|----------------|
|  | Power |  | Power |
|  | Display |  | Shift + Info |
|  | Mute |  | Mute |
|  | Source |  | Shift + AV |
|  | Sleep |  | Sleep |
|  | Picture |  | Shift + Format |
|  | Sound |  | Dual |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------------|
|  | QV |  | Pre Ch |
|  | SUBTL |  | Subt |
|  | EPG |  | Guide |
|  | Page + |  | Shift + Ch + |
|  | Page - |  | Shift + Ch - |
|  | Info |  | Info |
|  | ATV Menu |  | Shift + Menu |
|  | DTV Menu |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | CH + |  | Ch + |
|  | CH - |  | Ch - |
|  | I/II / Exit |  | Exit |
|  | I/II / Exit |  | Shift + Dual |



