











 

 
 
 
 
 
 

 













Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	V-Format		Picture / Format
	Sleep		Sleep / Timer
	FAV		Fav / Marker / PC
	TV / Radio		TV/Radio /
	List		Smart / List
	SAT		Shift + 0
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	Vol +		Vol+
	Info		Info / Angle
	CH+		CH+ / Page+
	Vol -		Vol-
	Recall		Back / Return
	CH-		CH- / Page-
	Menu		Menu / Home

Originalfernbedienung    Ersatzfernbedienung

	Text		Text / Goto
	Guide		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	Page Down		Shift + CH- /
	Left		Left
	OK		OK
	Right		Right
	Page Up		Shift + CH+ /
	Down		Down
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3





**Originalfernbedienung**   **Ersatzfernbedienung**

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Speaker		Sound / Title
	0		0
	✓		Display / Media

**Originalfernbedienung**   **Ersatzfernbedienung**