



**Originalfernbedienung Ersatzfernbedienung**

	On / Off		Power
	Mute All		Audio / Lang I/II
	Mute		Mute / Dimmer
	CD-DVD		Shift + 3
	FM-AM		Shift + 6
	AUX		Shift + 7
	TV		Shift + 1
	CBL-SAT		Shift + 0
	VCR		Shift + 4
	Up / Tune +		Up
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Guide		Guide / EPG / -/-
	System		Menu / Home

**Originalfernbedienung Ersatzfernbedienung**

	Down / Tune -		Down
	Exit		Exit / Cancel / Clear
	Track/Chap./CH +		CH+ / Page+
	Volume +		Vol+
	Track/Chap./CH -		CH- / Page-
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< / Seek -		I<< / Preset-
	I<< / Seek -		<< / Tune-
	>>I / Seek +		>> / Tune+
	>>I / Seek +		>>I / Preset+
	Shuffle / Presets <-		Red / Netflix / Search
	Repeat / Presets ->		Blue / Prime Video / Random
	1		1
	2		2



